



### **ADDENDUM TO THE REMOVAL OF THE DROP OUT TRIGGER GROUP IN VORTEK MODELS**

This addendum has been written to accompany the manual for all models of the VORTEK Rifle and the VORTEK Pistol. Its purpose is to assist in the removal of the "Drop Out Trigger Group".

1. **Please make sure that your firearm is unloaded and does not have a cap or primer on the nipple or in the breech plug.**
2. If your hammer spur/extension is attached to your hammer, unscrew it and place to the side at this time.
3. At this time, pull the hammer all the way to the "full cock" position and depress the trigger block safety so that the gun is in the "Safe" position.
4. Using a 4mm Allen wrench, insert the wrench into the trigger group screw located at the rear of the trigger group. Rotate the screw counter clockwise until the screw is released from the threads in the frame.
5. Pull down from the back of the trigger group away from the frame. The group will now pivot out of the bottom of the frame.
6. After the trigger group is removed proceed to step #4 of the trigger group removal instructions located in the manual for your Vortek model.

Reinstallation of the trigger group will follow the same instructions in reverse. Make sure the hammer is in the "full cock" position when reinstalling the trigger group into the frame. This will reduce the risk of cross threading the screw into the frame.

**NOTE:** When the trigger group is aligned correctly in the frame, the screw holes in the trigger group and the frame will line up with each other. The screw should thread without any difficulty. Be sure that both holes are aligned correctly to avoid cross threading the screw into the hole in the frame.

Once the trigger group is installed securely, be sure to perform a safety and function test of the safety, hammer cocking and release lever of your Vortek model to ensure that it is working properly.

JPR 3/16/2011