




**Pursuit G4 Northwest and Buckstalker Northwest Models  
Addendum for Disassembly, Cleaning, Reassembly of Firing Pin Bushing System**

**NOTE: THE NORTHWEST MODELS ARE DESIGNED  
FOR USE WITH MUSKET CAPS IGNITION ONLY.**

- 1) After disassembling forend and barrel from rifle frame, carefully remove bushing screw with a flat screwdriver.



- 2) Using finger pressure, gently remove the bushing from the front of the frame. This should expose the Northwest firing pin and spring. Remove these and clean all four items (including the screw) using solvent and gun lube. Be mindful to remove all debris from the parts.

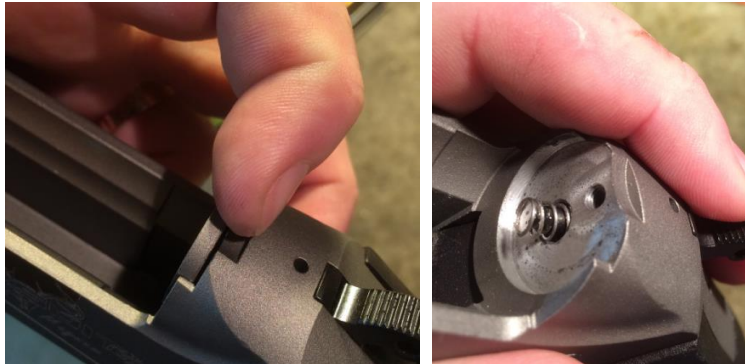

- 3) Remove fouling from both the firing pin channel and the threaded screw hole, as well as the face of the receiver. Breech plug cleaning brushes and solvent are excellent for this step.



- 4) Replace the firing pin (with the flat cutout facing down) into the frame and push the bushing into the recess on the frame. Secure the bushing by reinstalling the screw.



- 5) The hole in the top of the frame can be used for lubing the firing pin channel while shooting or in the field. However a thorough cleaning of the firing pin bushing system is necessary to maintain a well-working rifle.



- 6) **Be sure to perform a mechanical function check of your rifle as described in your product manual. Inspect the firing pin, firing pin spring, and bushing function to ensure that they have been properly re-installed into your frame prior to loading and shooting your Traditions Northwest Rifle**